


## Operation

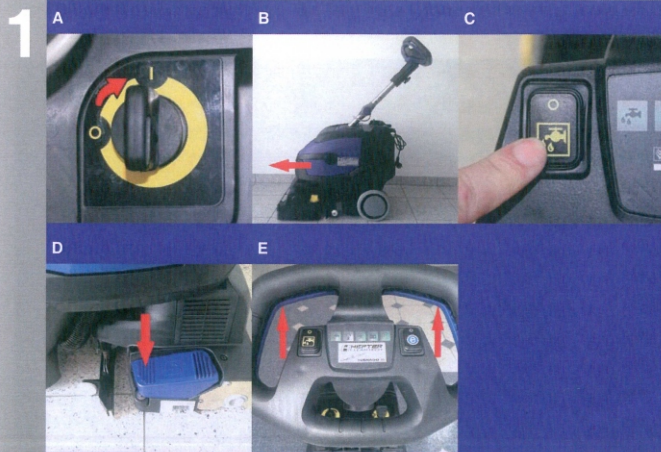


**Cleaning Caution**  
Risk of damage to the floor covering. Do not operate the appliance on the spot.  
Risk of damage. Lift the vacuum bar before pulling the appliance backwards over a longer distance.

A Set the appliance switch to "1".  
B Push the appliance forward until the parking stand folds up and the cleaning head touches the ground.  
C Switch on "Detergent" button.  
D Push down the pedal of the vacuum bar lifting device at the back to lower the vacuum bar.  
E Pull the safety switch towards the steering wheel, the brush drive and the application of the cleaning solution are switched on (if preset).  
Move the appliance over the surface to be cleaned.

**Note**  
If the steering wheel is turned by 180°, the appliance also reverses.

## Finish operation

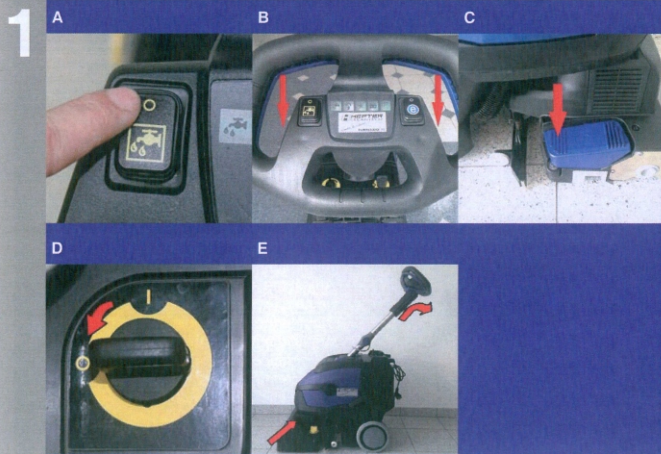


**Shutting Down the Appliance**

A Switch off the cleaning solution switch.  
Drive the appliance forward for another 1-2 m to draw off residual water.  
B Release the safety switch.  
C Push down the pedal of the vacuum bar lifting device at the front to raise the vacuum bar.  
D Set the appliance switch to "0".

**Caution**  
Vacuum lips and brush can be deformed permanently. Always park the appliance with the parking stand folded out.

E Push the appliance down on the steering wheel until the parking stand folds out.

## Finish operation

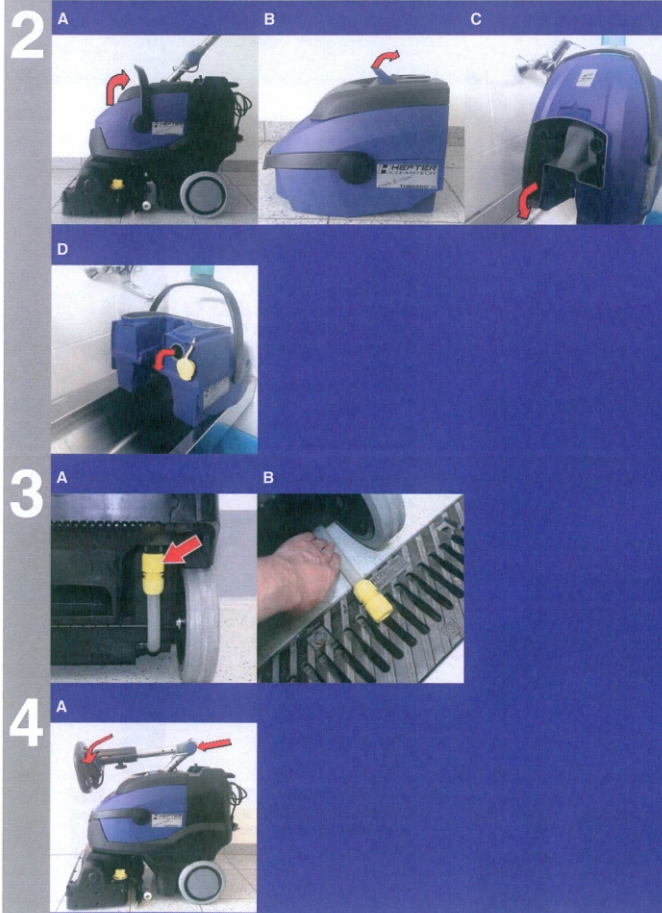

**Emptying the Dirt Water Reservoir**

**Warning**  
Please observe the local provisions regarding the wastewater treatment.

A Swivel the handle of the wastewater tank up and let it snap into place.  
Remove the dirt water reservoir.  
B Remove the cover of the wastewater tank.  
C Empty the wastewater tank.  
Swivel the wastewater tank sideways during emptying so that the tank is completely drained.  
Rinse the dirt water reservoir with clear water.

or  
D Open closure and drain the wastewater tank.

**Emptying the Fresh Water Tank**

**Warning**  
Please observe the local provisions regarding the wastewater treatment.

A Slide the coupling down.  
B Remove the hose of the level indicator and swivel it downwards.


**Folding down the steering column**

To reduce the space requirements for transport and storage, the steering column can be folded down.

A Release the star knob for the transport position.  
Swivel the steering wheel forwards.  
Tighten the star handle.


## Maintenance and care

1

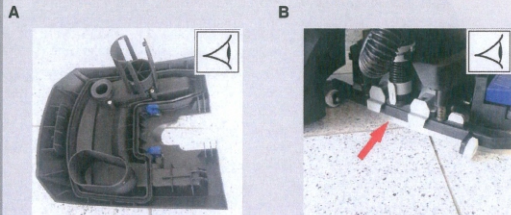

**Warning**  
*Risk of damage. Do not wash down the appliance with water and do not use aggressive detergents.*


A Drain off dirt water.  
Remove the lid of the wastewater reservoir and wash the inside of the lid and the float with water. Rinse the dirt water tank with clear water.

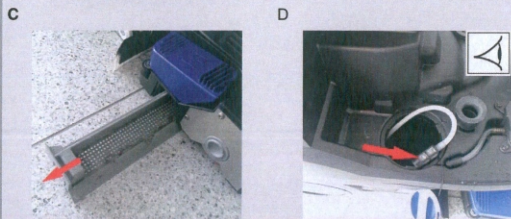

B Clean the vacuum bar.  
Clean the vacuum lips, check for wear and replace them if required.

C Remove bulk waste container and empty it.


D Clean the fresh water filter.

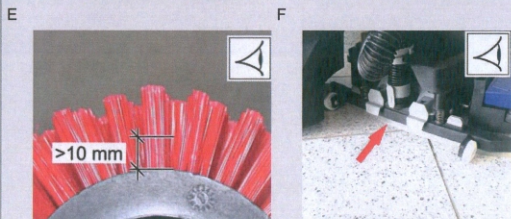

E Clean brush.  
Check the brushes for wear, replace if required.

F Remove the water distribution bar on the cleaning head and clean the water channel.

2

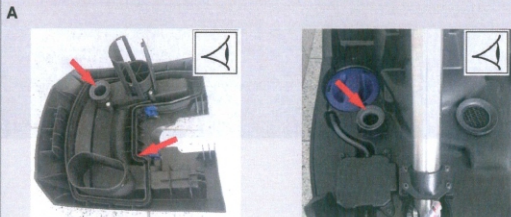

A Check the condition of the seals between the appliance and the wastewater reservoir; replace if required.

3

Have annual customer service work performed.


daily  
monthly  
Customer Service



**WARNING**  
*These are only brief instructions! Please read the operating instructions accompanying the appliance prior to using or maintaining the appliance.*  
The non-compliance of the operating and safety instructions may lead to damages of the appliance and to dangers for the operator and other persons.

## Start up


1

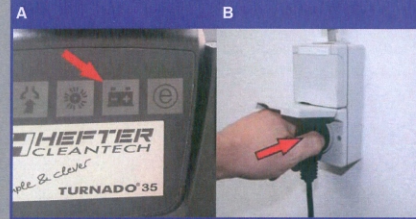

A Check battery charge indicator.  
Green Battery charged  
Orange: Battery almost empty  
Red Appliance switches off: Load battery  
Charge the battery if required.

B Insert the mains plug into the socket.


2

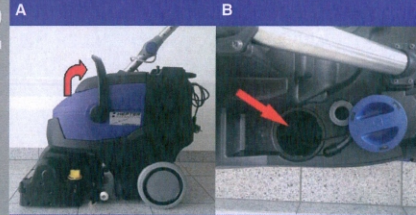

**Warning**  
*Risk of damage. Only use the recommended detergents. With respect to different detergents the operator bears the increased risk regarding the operational safety, accident risk and reduced product life of the appliance. Only use detergents that are free from solvents, hydrochloric acid and hydrofluoric acid.*  
Follow the safety instructions for using detergents.

**Note**  
Do not use highly foaming detergents.


3

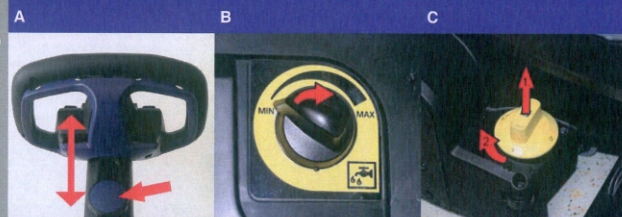

A Release the star knob for the height adjustment of the steering wheel.  
Adjust the steering wheel to the desired height.  
Tighten the star handle.

B Adjust the dosing of the cleaning solution in accordance with the soiling and the type of the flooring material.

C Adjust the rotary handle of the brush contact pressure to the desired value.  
Only adjust the brush contact pressure when the cleaning head is raised.

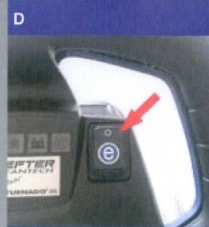

**Note**  
*If the appliance pulls forwards too strongly during operation, reduce the contact pressure.*

D Bring the Eco mode switch into the desired position.  
Normal operation: The appliance works at the maximum brush speed and the highest suction performance.  
Eco: The appliance works at reduced brush speed and suction performance. This also reduces the energy consumption. The possible action time with one charging cycle increases.